

## Information: Updating the firmware for IF6 (Flash)

Dated: 2009 March 26


Updating the firmware in interface6 (IF6) is done via the serial port (RS232).

Please take the following steps:

- Find out the COM-port used by **nccad7.5** (Parameters => Machine => Check parameters => Basic settings).
- Close **nccad7.5**.
- Re-start the machine/MCS.
- Select the folder `\Firmware\IF6\` in the installation directory of **nccad7.5** (normally `C:\Kosy75\`)
- Start the **KOSYFlashTool\_v6.3.0.exe**.
- Select the latest firmware file, e.g. **KOSYFlashfile\_IF6\_9\_9\_28\_0\_38400.xml**.



- Start flashing.

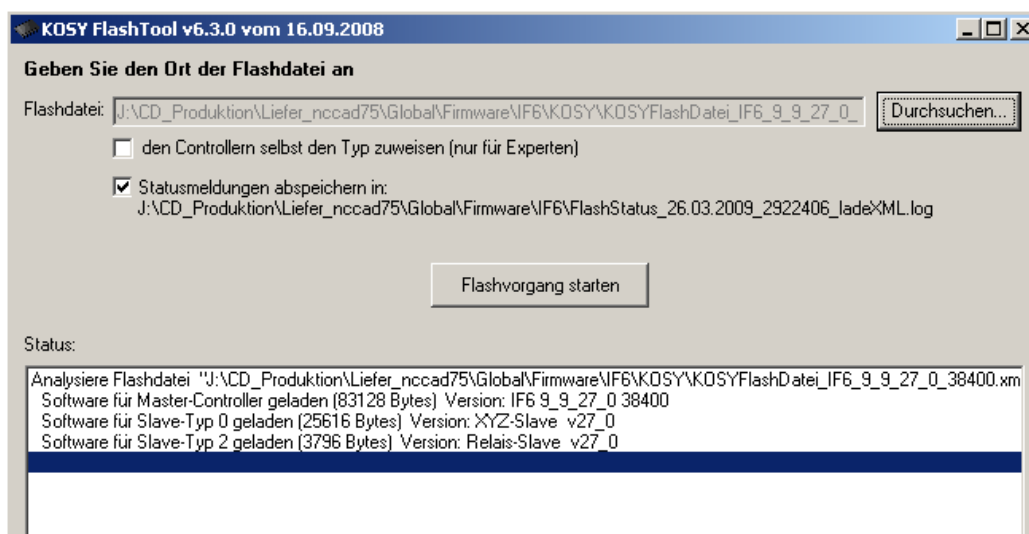

- Select the COM-port according to the settings in **nccad7.5**.



- Wait until flashing is finished, this may take several minutes depending on your PC.
- After flashing was successful close the Flash-Tool.
- Re-start the machine/MCS.
- Check if updating was successful in the menu Help => File Information.